6-2. Menu navigation



You can navigate the menu by using the Menu button.

Every state will be displayed on the OLED screen. Menu button is printed on the Smartpen Control Card (see 5–3).



6-3. Menu structure



6-4. Smartpen Control Panel

+

You can also navigate using the echoll Smartpen Control Card included in with the product.



Front

Back

Status		
time	04:12 PM	Display : Current Time
battery		Display : Battery remaining It is displayed in increments of 10%
storage	100% available	Display : Remaining Storage
date	Mon Jan 3,2022	Display : Current Date
audio	Quality : High Quality : Medium Quality : Low	Settings : Audio Quality High/Medium/Low
software	FW 3.1.3.3-AR	Display : FW version



l